




Operation & Maintenance Manual

For Northern® 4400, 4500, 4600, and 4800 Series Pumps with Liner Plates

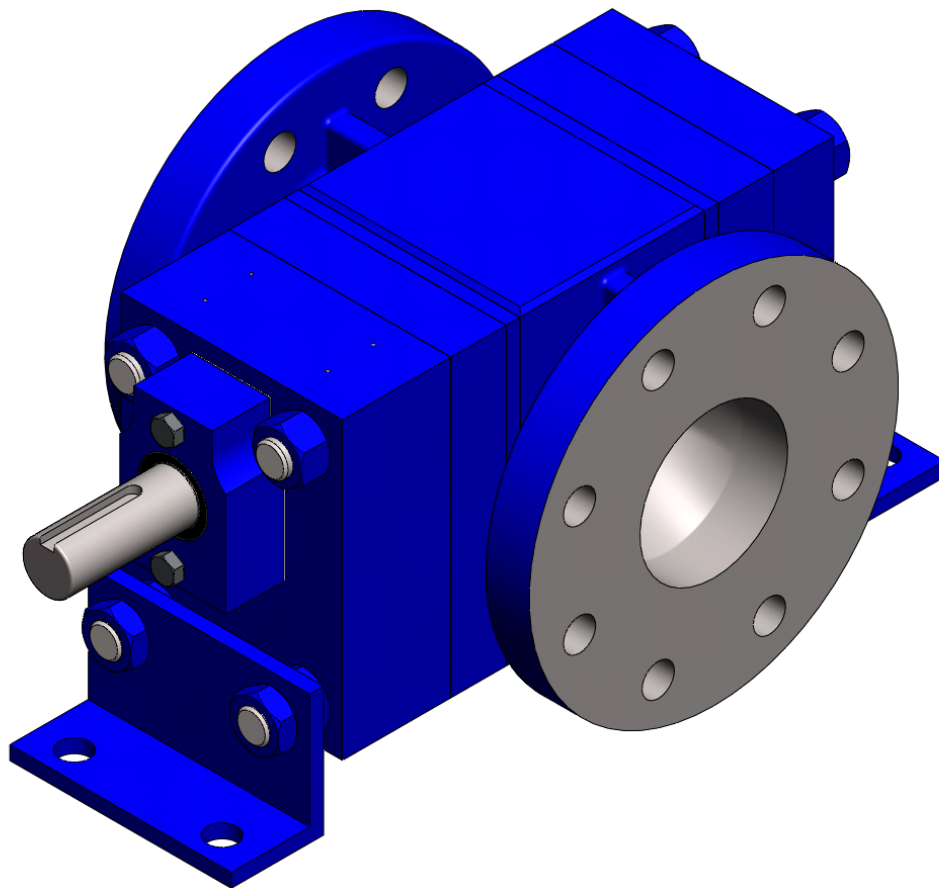

340 West Benson Avenue
Grantsburg, WI 54840
1-800-366-1410
715-463-5177

www.northern-pump.com

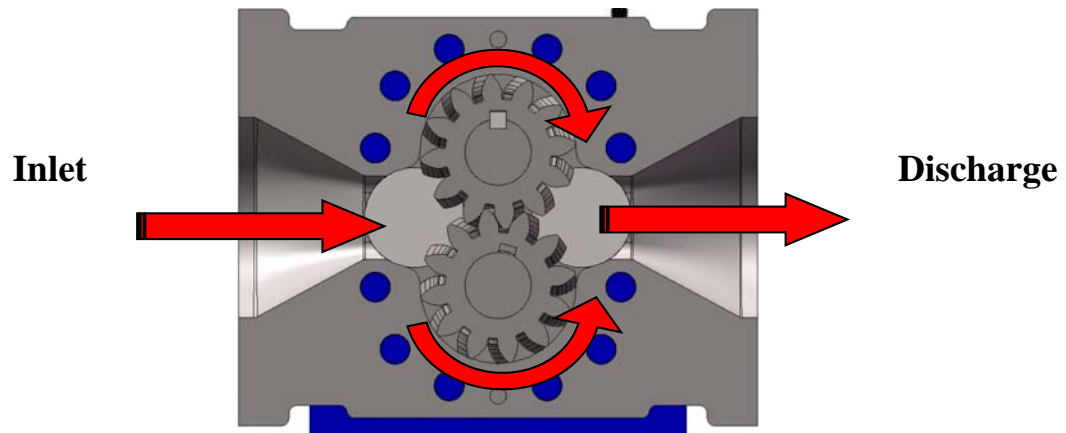


Table of Contents

Introduction	3
Cautionary Statements.....	5
Pump Installation.....	5
Removal of Pump from Installation	6
Disassembly.....	6
Pump Disassembly Steps.....	7
Cleanup.....	13
Inspection	13
Assembly	14
Trouble Shooting.....	15
Lubrication and Preventative Maintenance.....	17
Appendix A: Exploded Drawing.....	A.I
Appendix B: Seal Replacement.....	B.I

Introduction

The 4000 series gear pumps are a positive displacement, rotary pump with two gears of equal size. Fluid is drawn into the pump by the gear teeth as they come out of mesh and is carried to the discharge side of the pump by the rotating gears where it is forced from the pump by the meshing teeth. The inlet port of the pump is on the side where the gears are coming out of mesh; the discharge port is on the side of the pump where the gears are coming in to mesh.



The pump has a constant discharge at constant rotational speed. Clearances of a few thousandths of an inch, at the edge and sides of each gear, vary with the size of the pump. The combination of the gear width and the speed of the pump determine the flow rate. There are virtually unlimited variations of the pump assembly possible depending on the application. The pump assembly can incorporate but is not limited to:

- Roller Bearings,
- Bronze or carbon graphite sleeve bearings,
- An outboard bearing bracket (the outboard bearing bracket is necessary to provide shaft support whenever a sprocket, gear, or pulley is to be mounted on the drive shaft),
- An internal relief valve (all pumps should have a relief valve to protect the pump and piping from excess pressure and to eliminate possible overloading of the electric motor; the relief valve can be part of the pump or installed in the discharge line).


Gear pumps, depending on the model, handle viscosities up to 1,500,000 cP, 200 gal/min, and discharge pressure up to 2,000 pounds per square inch (13,790 kPa). Studs fasten the components of the pump assembly together. The studs also serve as dowels for ensuring alignment of the plates. The mating surfaces of all plates are ground to a 16RA surface finish and are sealed by a thin coat of sealant or with O-rings.

A myriad of inlet and discharge connections are available to include but not limited to: bolt-on sanitary flanges, NPT ports, cast flanges, welded steel flanges of which are all typically located on the sides of the cylinder or seal adapter plates. In special circumstances can be added to the top of the seal adapter plate or through the rear of the pump. The shaft is typically sealed with a John Crane type mechanical seal or a variety of different types of packing depending on the duty requirements of the pump.


Figure 1. General Configurations of 4000 Series Pumps

Mechanical Seal

Cylinder with Flanged Connections

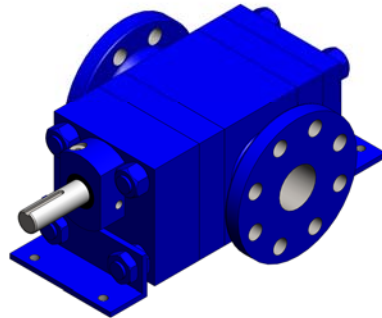


Seal Adapter Plate with NPT Connections

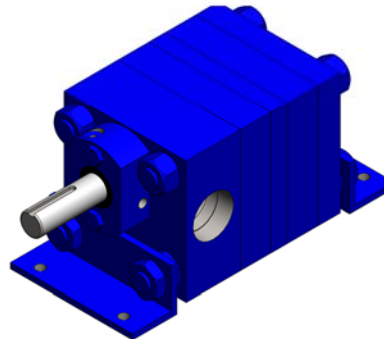


Packing Set

Cylinder with Flanged Connections

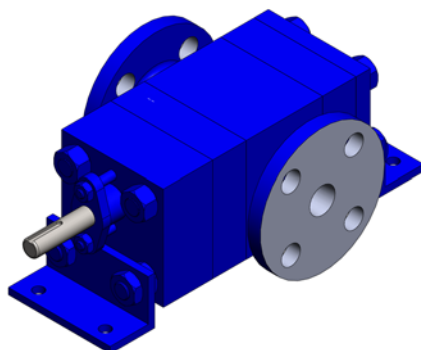

Seal Adapter Plate with NPT connections

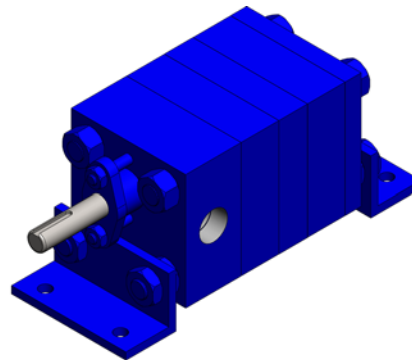



Cautionary Statements

Failure to heed these cautionary statements may result in personal injury and/or damage to equipment:

1. Disable and lock-out the drive system before any work is done to install, maintain, or remove the pump.
2. Fully depressurize the entire system.
3. Close the valves closest to the pump in both the suction and discharge pipe.
4. Wear protective eyewear, and any other required face protection.
5. When handling corrosive, caustic, toxic, or hazardous liquids, wear protective clothing to prevent contact with skin.
6. Wear protective footwear such as safety shoes.
7. When handling liquids with toxic vapors, wear a properly rated breathing mask.
8. Work area must be properly ventilated.
9. Work area must be properly grounded.
10. Do not work alone.
11. Clean up any spilled liquid immediately.

Pump Installation

Please refer to Appendix A for complete diagram of the gear pump.

1. 4000 series pumps are heavy. Use appropriate lifting and transportation methods and means (hoist, forklift, pallet jack, etc) when moving a pump.
2. Verify the drive mechanism is off and locked out.
3. Level and properly align pump.
4. Line pipes up naturally. Forcing pipes into place with flange bolts can draw pump out of alignment. Support pipes independently to eliminate strain on pump casing. Check alignment again and correct if necessary.
5. Test inlet pipe lines with pressure for leaks to ensure that they are completely airtight. The inlet piping must have a diameter equal to, or larger than, the pump inlet port.
6. Test rotation of the motor to ensure that the pump rotates in the direction indicated by arrow on pump casing.
7. Do not subject pumps to thermal shock by exposing a cold pump to a hot liquid supply or vice versa.

Removal of Pump from Installation

Please refer to Appendix A for a complete diagram of a typical configuration gear pump.


1. Turn off and lock out the drive mechanism.
2. Fully depressurize both the suction and discharge lines to the pump.
3. Close the valve in the suction and discharge lines closest to the pump.
4. Place a pan or other liquid collecting device under the pump to collect the liquid that may drain from the pump or the suction and discharge lines when assembly is disconnected.
5. Once the pump is disconnected, rotate the pump so the discharge port is pointing down over the liquid collecting device and tilt pump forward allowing any fluid in the pump to drain. Repeat procedure for the suction port of the pump.
6. Remove the coupling hub and key from the drive shaft. Clean any residue from the drive shaft. Remove any burrs or upset metal from the surface of the drive shaft.

Disassembly

The pump body is a series of plates held together with four studs. The faying surfaces of the plates are ground flat and sealed with sealant or with O-rings. Be prepared to use some force to take the pump apart.

Depending on the specific pump, please refer to Appendix B for proper disassembly and replacement of seal.

Before disassembly, mark the pump housing with a scribe line or permanent marker line along one edge and a diagonal from corner to corner. When the pump is reassembled, the parts will be easily arranged back to previous sequential order. Refrain from using a punch and hammer to dimple plates for identification. This causes deformation in the plates resulting in the possibility of the pump not sealing when reassembled.

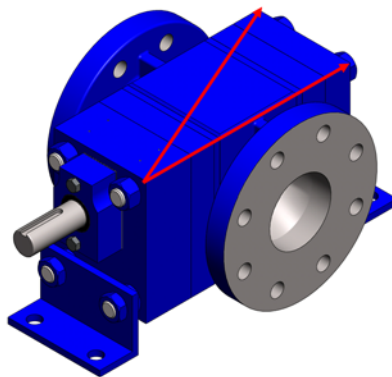

**Suggested marker
or scribed lines
across plates.**




Pump Disassembly Steps

Step

1


Refer to Appendix A for complete identification of parts and layout of the pump.
Remove the Mounting Brackets and the Jam Nuts (4x 7) that secure the Mounting Brackets.

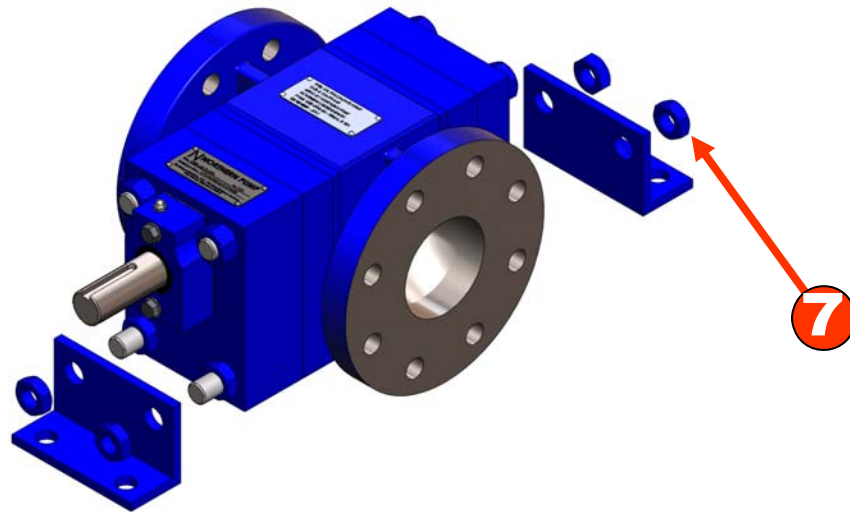

Step

2

Loosen and remove the Cap Screws (2x 4) and Lock Washers (2x 1) that retain the Bearing & Seat Housing (5).

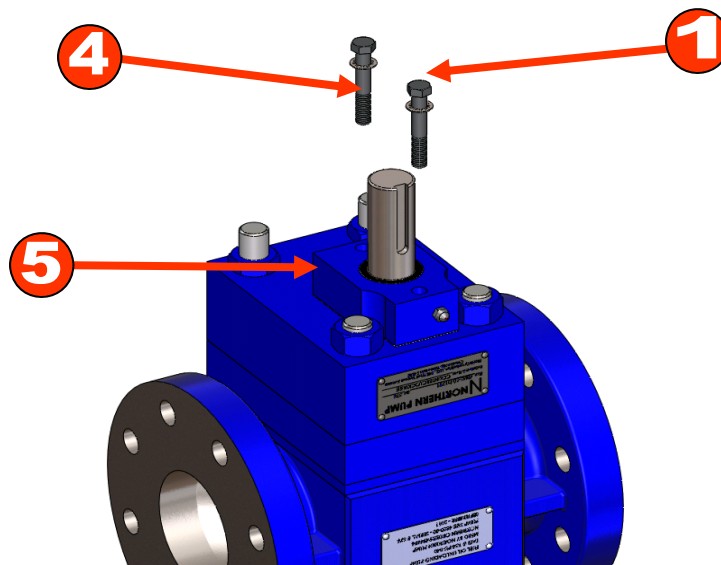




Step

3


Refer to Appendix B for specific seal removal – Type 21 Mechanical Seal: Page B.I-III;
Type 9, 8-1, or 8B-1 Mechanical Seal: Page B.IV-VI.

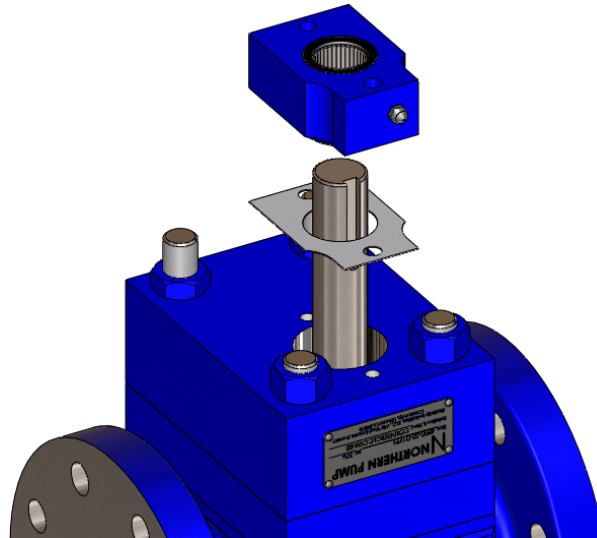

Step

4


Remove the Retaining Ring (23) that is located in the Seal Adapter plate (11) bore on the drive shaft.

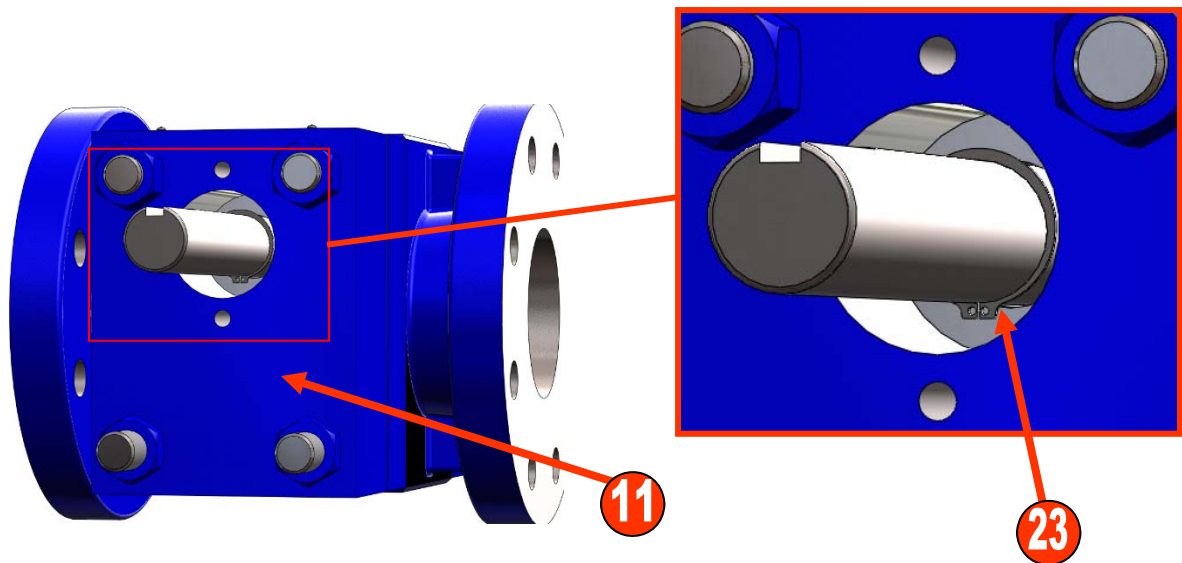




Step
5

Loosen and remove the Whole Nuts (2x 6) and Jam Nuts (2x 7) that retain the Seal Adapter Plate (11). Remove the Seal Adapter Plate by sliding it up and over the Drive Shaft (16) and Studs (2x 12 and 2x 13).

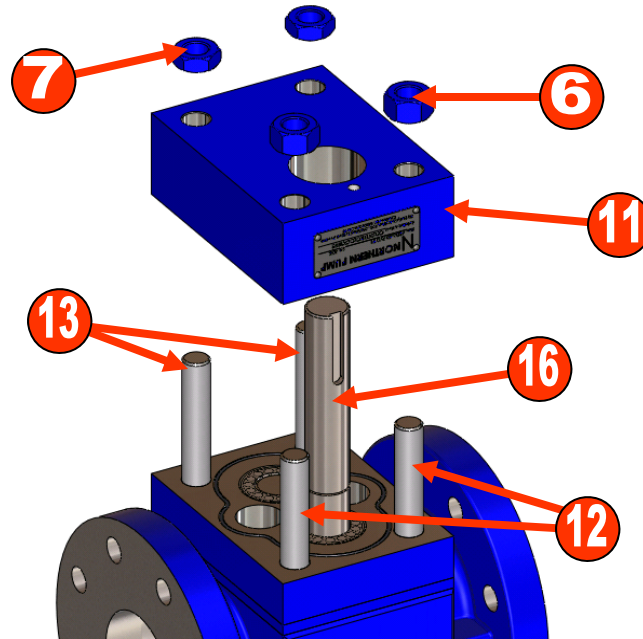

Step
6

Remove the Front Bearing Plate (15) and O-rings (10). The Bearing Washers (4x 21) and Roller Bearings (2x 20) will remain installed in the Bearing Plate. The Rollers may fall out of the Bearing Plate - this is normal. The O-Ring on the underside of the Bearing Plate may or may not remain in the O-Ring Groove. If it is not retained, remove it at this point.

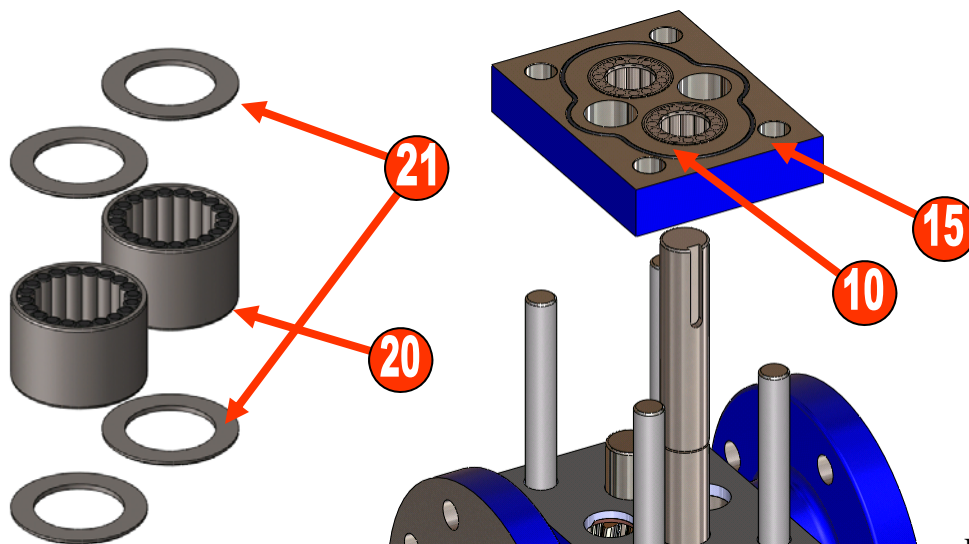




Step

8


Remove the Front Liner Plate (26) from the assembly by sliding it up and over the Drive Shaft (16) and Studs (2x 12 and 2x 13). Note the orientation.

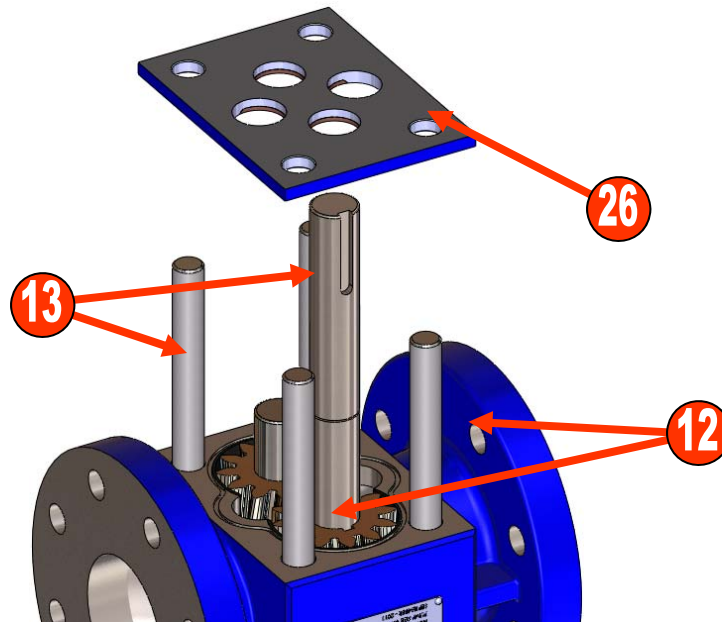

Step

9

Remove the Drive Shaft (16) and Drive Gear (29). The Shaft and Gear are pressed together as one assembly.

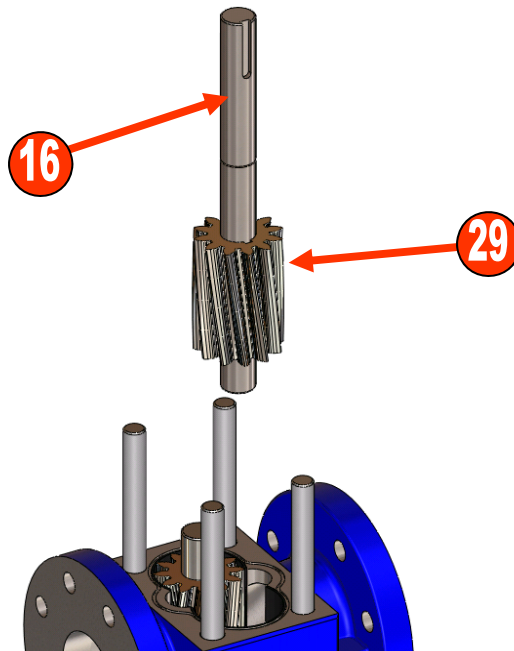




Step

10


Remove the Driven Shaft (17) and Driven Gear (28). The Shaft and Gear are pressed together as one assembly.

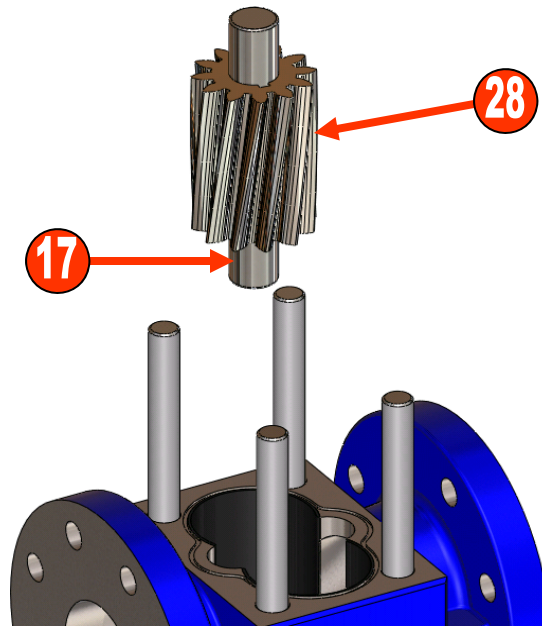

Step

11

Remove the Cylinder (1) from the assembly. At this point, the studs may be removed. The O-Ring on the underside of the Cylinder may or may not remain in the O-Ring Groove. If it is not retained, remove it at this point

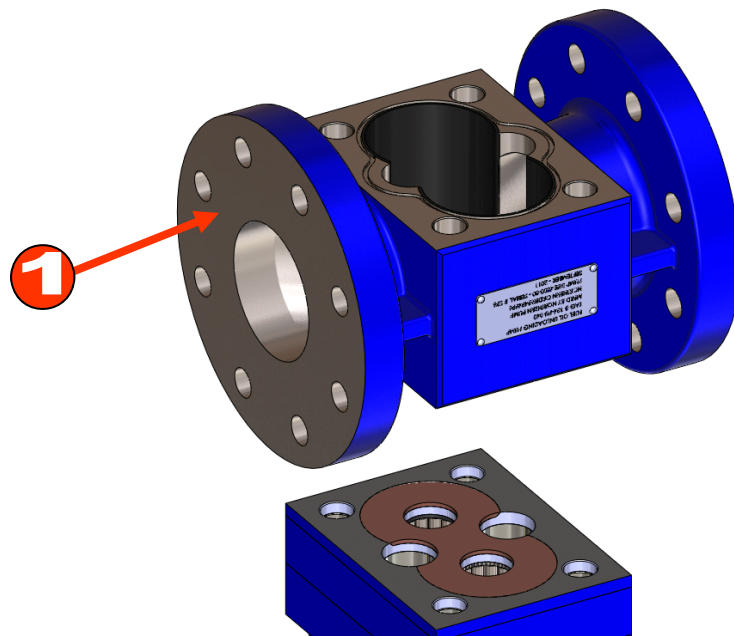




Step

12


Remove the rear Liner plate (7). Note the orientation.

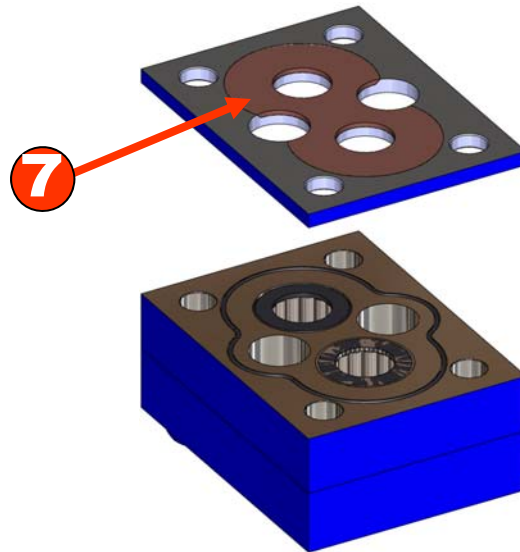

Step

13

Remove the Rear Bearing Plate (15) and O-rings (10). The Bearing Washers (4x 21) and Roller Bearings (2x 20) will remain installed in the Bearing Plate. The Rollers may fall out of the Bearing Plate - this is normal. The O-Ring on the underside of the Bearing Plate may or may not remain in the O-Ring Groove. If it is not retained, remove it at this point. Remove the Studs and Dowels if you have not already. Disassembly is complete.

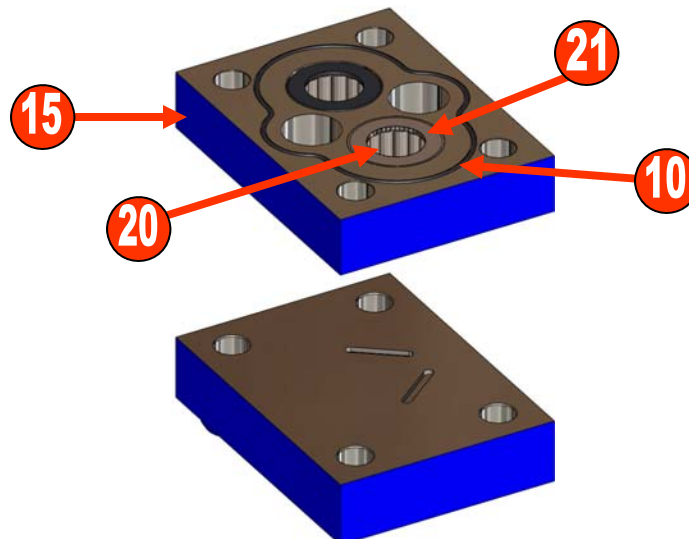



Clean-up

Clean all parts of the pump in accordance with specified cleaning procedures. Be prepared for exposure to specific chemical used in pump. Take all appropriate precautions to prevent damage to the parts of the pump during the cleaning process.

All pump parts accept a wide variety of acceptable cleaning methods or chemicals. All parts of the pump may be heated to 320°F (160 °C). Clean the flat surfaces of the pump body parts by rubbing them lightly on a fine sand paper (240-320 grit) stretched or laid on a flat ground surface. Move the part in either a circular or figure eight pattern to prevent fine scratches are not produced across the part. Wetting the sand paper with solvent will improve the ability of the sandpaper to clean the parts.

Inspection

Visually inspect all parts for obvious problems- scratches on surfaces that mate with seals, cracks, upset metal that will affect how parts mate together, burrs, or other serious wear. Correct problem or replace part as necessary. Inspecting the following parts prior to assembly is recommended:

Inspect the shaft and bearing plates for excessive grooves or other signs of severe wear in bearing bores and gear wear surfaces:

- The bearing bores must be free of major scratches and major scoring.
- The lubrication groove must be clean.

Inspect the drive and driven shaft and gear for wear:

- No burrs or upset material is allowed on the surface of the drive shaft that mates with the coupling.
- Major nicks, scratches, grooves, or other defects could be a sign of imminent gear failure at the end surfaces of the gear.
- No major nicks, scratches, grooves, or other defects are allowed on the outside diameter of the gear.
- Visually inspect the gear teeth. The surfaces of the gear teeth must be smooth and free of obvious wear or damage.

Inspect the cylinder for wear:

- No nicks, burrs, or scratches are allowed on the ends of the cylinder.
- Visually inspect the gear bores for any sign that the gear has contacted the surface of the gear bore. No major nicks, scratches, grooves, or galling is allowed on the gear bore surface. If any of these conditions exist, replace affected parts as necessary.

Inspect the seal adapter plate:

- Visually inspect the matting surface for nicks, scratches, or burrs. No nicks, scratches, or burrs that will affect the mate-up of the parts at assembly or that will affect the ability of the O-ring to properly seal are allowed.

Inspect the bearing & seat housing:

- No scoring or other abnormal wear patterns are allowed on the bearing and bore. If necessary, the bearing may be pressed out of the Bearing housing and replaced by pressing in a new one.



Inspect the O-rings:

- No nicks, scratches, cuts, tears, or permanent deformation are allowed.
- The O-rings must be firm and pliable. Replacement of O-rings is recommended whenever the pump is disassembled.

Assembly

After Disassembly

Visually inspect all parts for scratches on surfaces that mate with seals, cracks, upset metal that will affect how parts mate together, burrs, or other serious wear. Correct problem or replace part as necessary. Complete disassembly procedures in reverse order.

Use a light coat of stable, pure, synthetic oil on the shafts, gear, and studs to facilitate assembly. Avoid touching the polished faying surfaces of the Mechanical Seal Head (16) and Seat (15). Torque the Heavy Hex Whole Nuts (4) and Jam Nuts (5) to the specified torque requirements listed in **Table 1**.

Table 1. Torque Requirements

Model Series	Torque/ft/lbs
4300	20
4400	40
4500	60
4600	120
4800	180
4900	180
5400	300

Drive shaft & gear should turn freely after completion of assembly.



Trouble Shooting Guide

Standard for all 4000 series pumps

Issue	Solution
Key will not fit into keyway in drive shaft	Check for burrs and nicks in the keyway and on the key. Remove as required. Measure width of key and keyway, if an interference fit is found, reduce the width of the key.
Motor shaft turns but pump shaft does not	Verify that the coupling has been properly installed with the correct key in each hub. Verify that the set screws are properly tightened in each coupling hub.
Pump requires too much torque	Make sure that the viscosity of the liquid being pumped is not abnormally high. Check alignment of pump.
Pumped liquid has entrained air	Check for air leaks in suction line.
No liquid delivered	Verify rotation of pump to the motor. Clogged inlet. Air leaks on inlet side of pump or through shaft seal. Relief valve pressure setting too low or held off seat by foreign material.



Issue	Solution
Pump works for a while then quits	Leaky inlet piping. Inlet lift too high. Air or gas in the liquid.
Pump takes too much power	Pump speed or discharge pressure in excess of specifications. Liquid is thicker or more viscous than specified. Packing gland too tight, causing high friction in shaft seal. Pump not properly aligned.
Flow rate is too low	Make sure that the viscosity of the liquid being pumped is not abnormally low. Make sure that the discharge pressure is not abnormally high. Make sure that there are no air leaks in the suction line. Verify that the rotational speed is correct. Disassemble pump and verify that the internal clearances are within specification.
Pump makes too much noise	Air or gas in fluid being pumped. Air leaking into inlet pipe or through shaft seal. Inlet velocity too high due to using inlet piping smaller than pump inlet opening. Inlet pipe not submerged deeply enough or too close to return line causing pump to intake liquid/air mixture. Relief valve chattering. Wrong direction of rotation. Pump not properly aligned.


Lubrication and Preventative Maintenance

The pump is fully lubricated by the pumped liquid. Dry running must be avoided, as it will cause internal damage to the pump.

It is recommended that a very small amount of a liquid compatible with the liquid to be pumped be put into the pump at startup. This will lubricate the pump during the startup period.

Service the grease seal housing bearing on pumps with general purpose bearing grease every six months or every 500 hours of operation, whichever occurs first.

**Grease
Fitting**

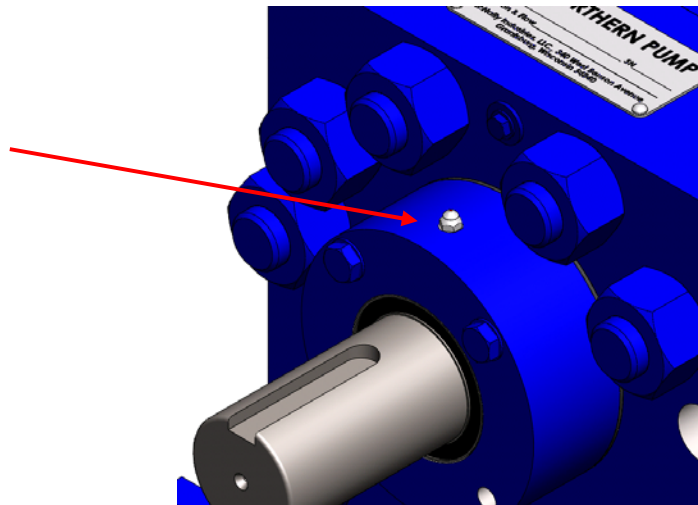


No.	Part Name	Qty.
1	Lock Washer	2
2	Cylinder	1
3	Gasket	1
4	Cap Screw	2
5	Bearing & Seat Housing	1
6	Whole Nut	4
7	Jam Nut	8
8	Gear Key	1
9	End Key	1
10	O-ring	6
11	Seal Adapter Plate	1
12	Stud	2
13	Stud	2
14	End Plate	1
15	Bearing Plate	2
16	Drive Shaft	1
17	Driven Shaft	1
18	Grease Fitting	1
19	Bearing Roller	64
20	Bearing Sleeve	4
21	Outer Bearing Washer	8
22	Nameplate and Pins	2
23	Retaining Ring	1
24a	Mechanical Seal Head	1
24b	Mechanical Seal Seat	1
25	Roller Bearing	1
26	Liner Plate, Front	1
27	Liner Plate, Rear	1
28	Pump Gear, R.H.	1
29	Pump Gear, L.H.	1

Disclaimer: Pump Model is for explanation purposes only, please refer to Appendix B for specific seal replacement procedures.

Bulletin 100-LP Rev 1.1
Special Field Maintenance Manual


APPEDIX A

Pump Assembly Bill of Materials

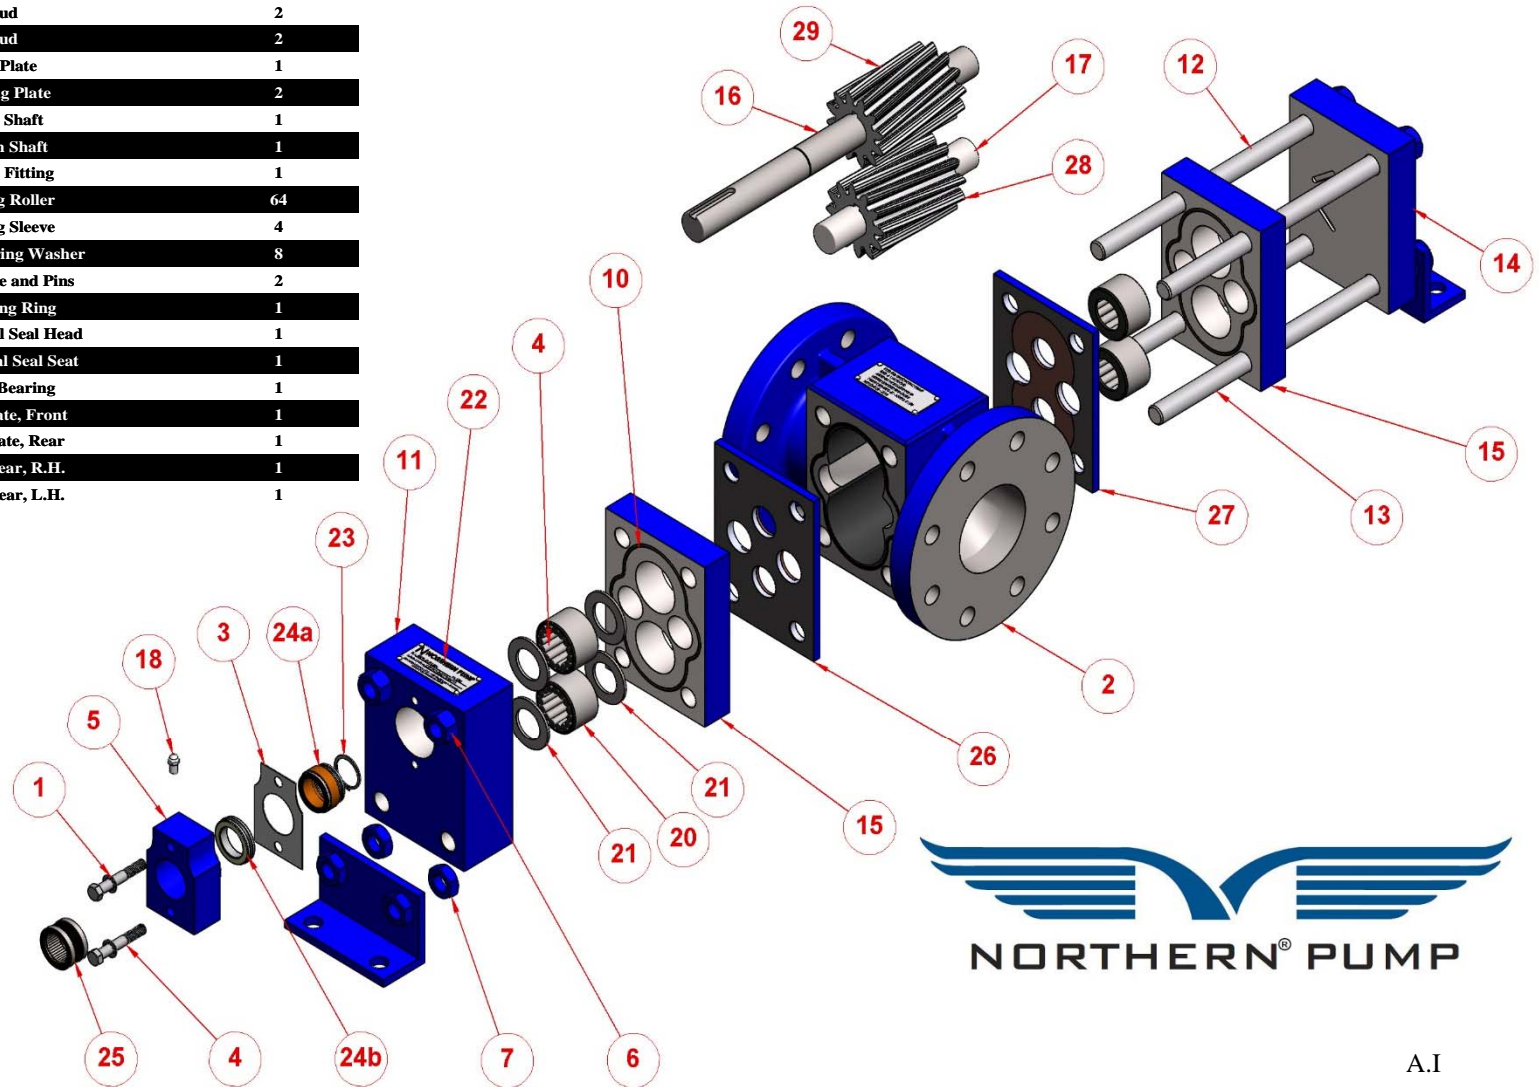

Appendix B: Replacement of Type 21 Mechanical Seal

Seal Diagram

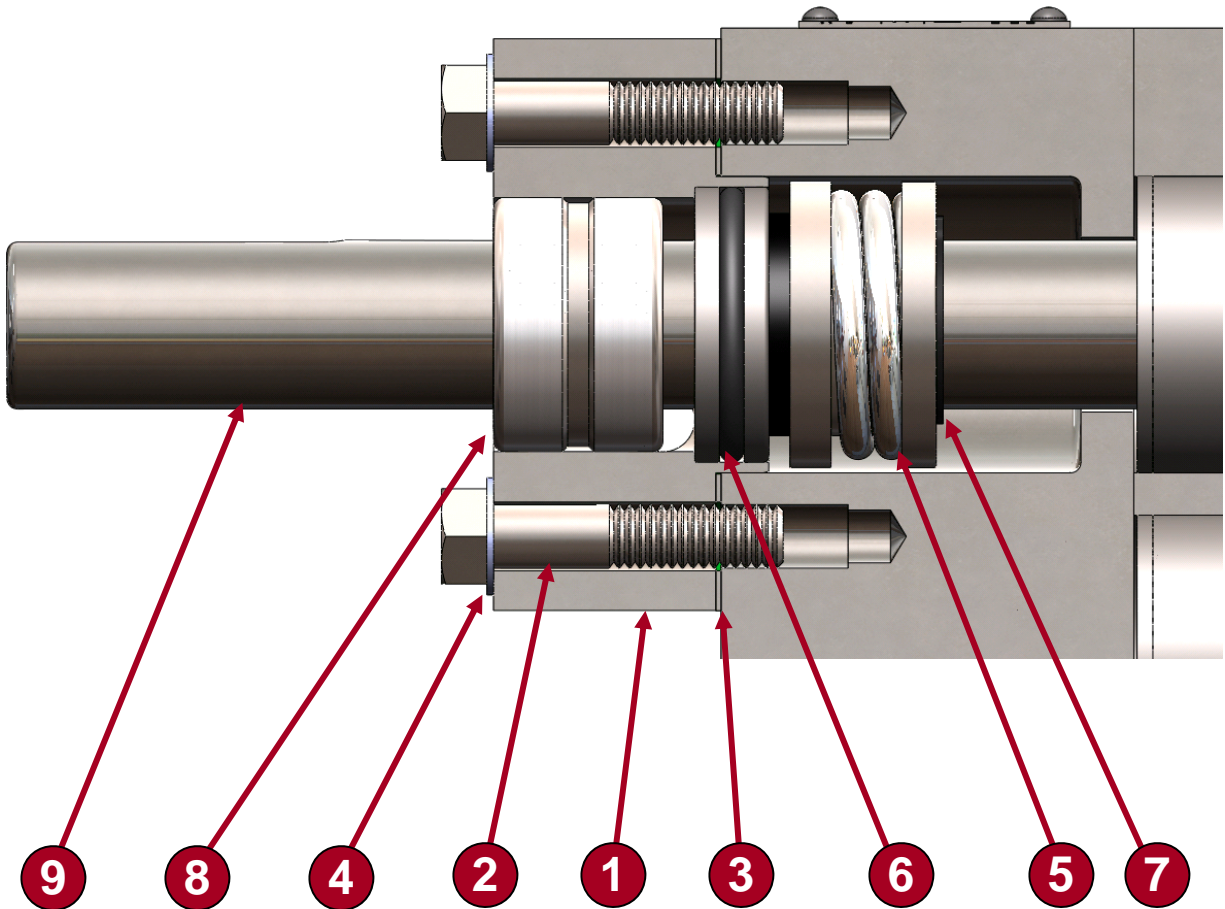


No.	Name
1	Bearing and Seat Housing
2	Capscrews
3	Gasket
4	Lockwashers
5	Mechanical Seal Head
5a	Spring Retainer
5b	Spring
5c	Seal Head
6	Mechanical Seal Seat
7	Retaining Ring
8	Shaft Support Bearing
9	Drive Shaft



Step

1


Loosen the two cap screws that hold the Bearing and Seat Housing. Remove the Bearing and Seat Housing as well as the cap screws. The Mechanical Seal Seat will be retained in the Bearing and Seat Housing.

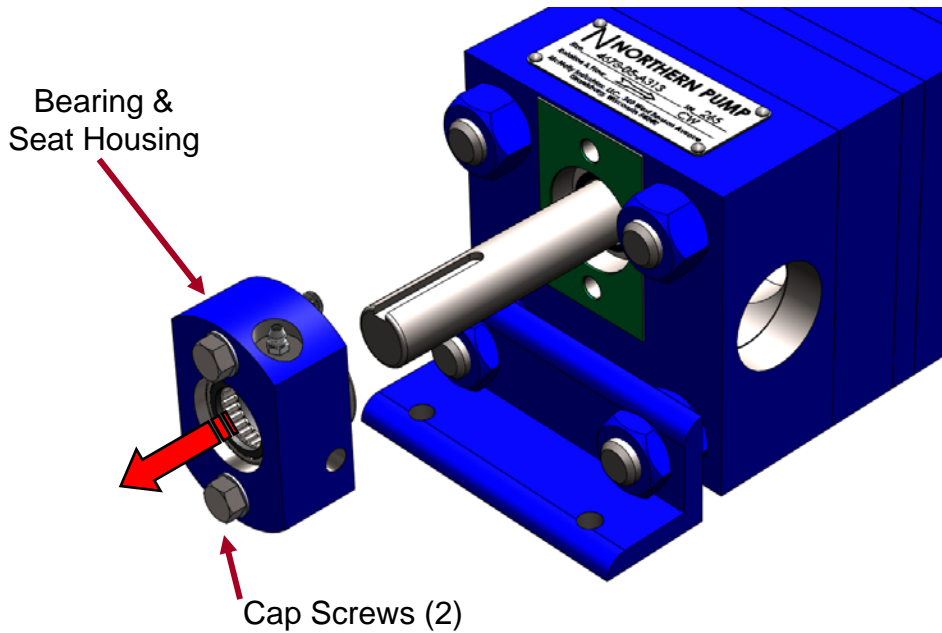

Step

2


Remove the Mechanical Seal Seat from the Bearing and Seat Housing. Remove the Mechanical Seal Head from the Pump assembly by sliding it over and off the drive shaft.

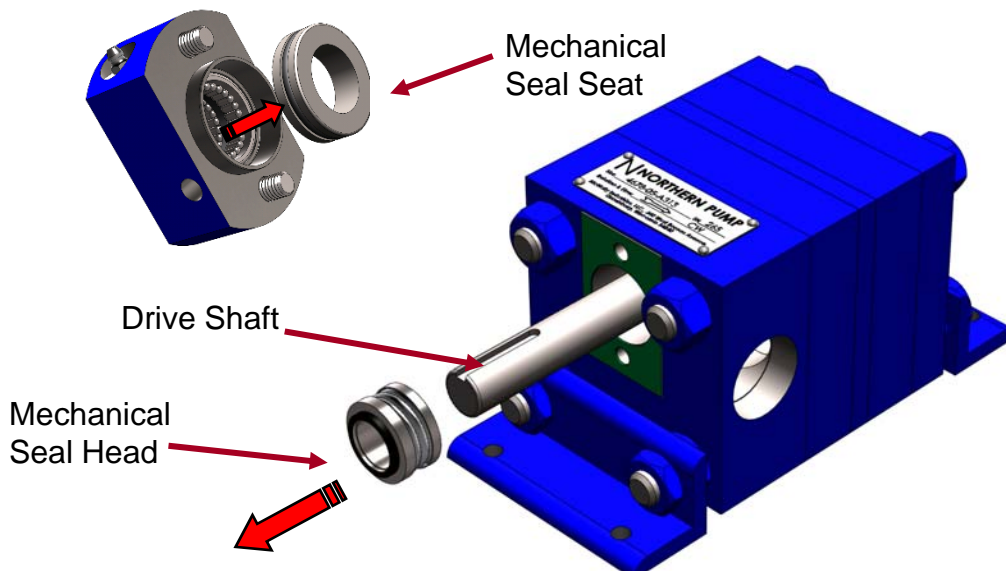

Step

3


Inspect the retaining ring. If it is damaged, replace it. At this point it is recommended that you remove and replace the gasket that is between the pump and the Bearing and Seat Housing.

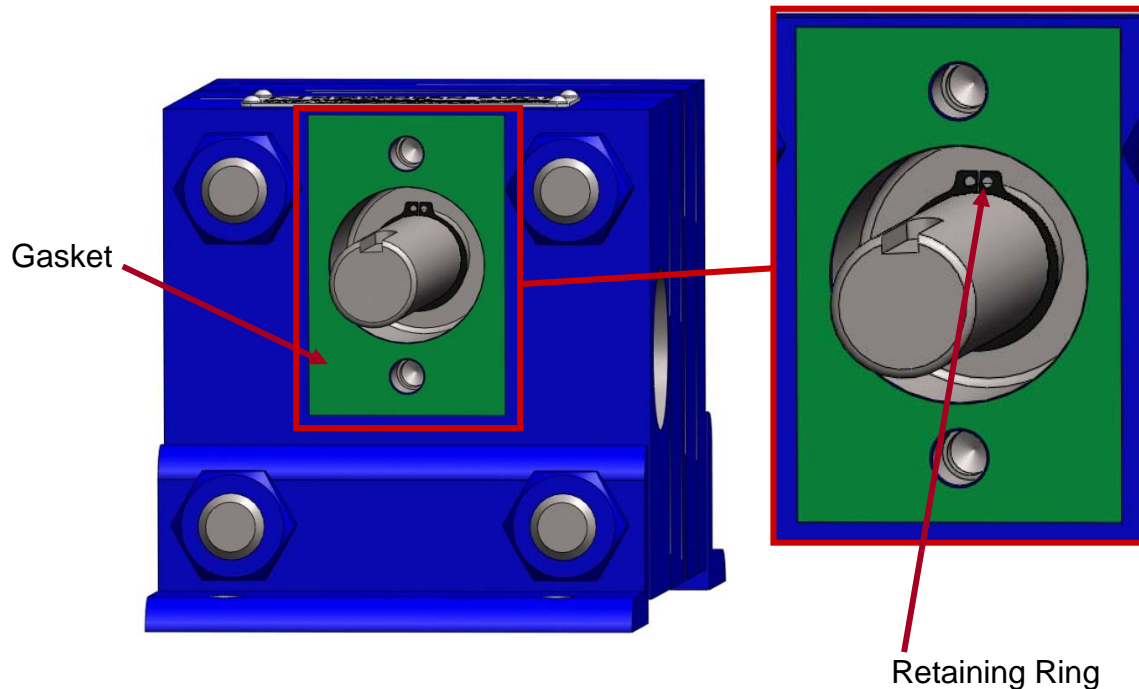

Prior to installing the seal head, rotate the drive shaft until the end keyway is in the 12 o'clock position. Install retaining ring and lubricate drive shaft with a light film of oil. Install spring retainer and spring using a clean piece of cardstock placed on the seal face of the seal head, press the seal head on the drive shaft. Continue moving the seal head down the drive shaft applying a small amount of upward force on the seal head as it passes over the rear area of the keyway. To not cut the elastomer on the seal head, insure proper engagement of the seal head with the spring and spring retainer. Be careful not to touch the polished surface on the Seat or Mechanical Seal.

Replacement of John Crane Type 9, 8-1, and 8B-1 Mechanical Seal

Seal Diagram

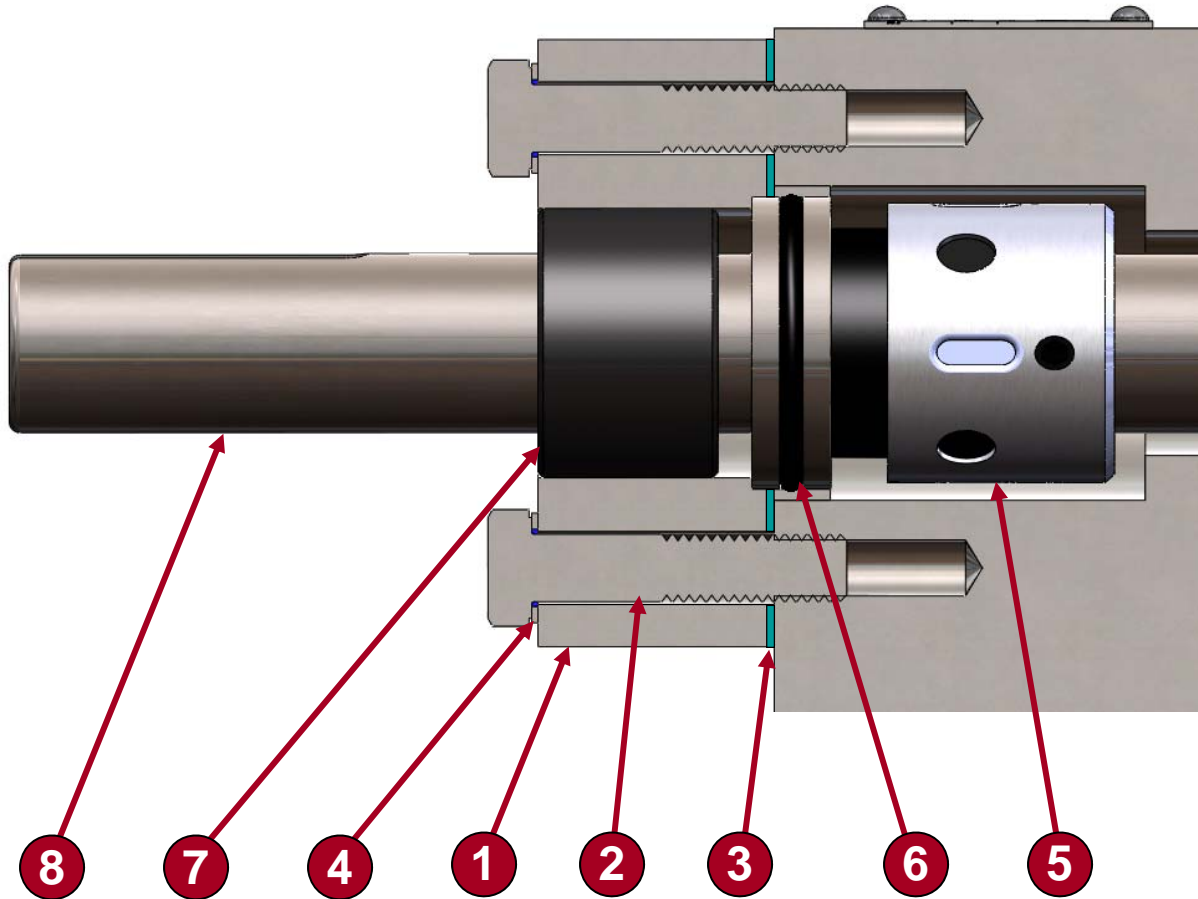


No.	Name
1	Bearing and Seat Housing
2	Capscrews
3	Gasket
4	Lockwashers
5	Mechanical Seal Head
6	Mechanical Seal Seat
7	Shaft Support Bearing
8	Drive Shaft



Step

1


Loosen the two cap screws that hold the Bearing and Seat Housing. Remove the Bearing and Seat Housing and cap screws. Remove the Mechanical Seal Seat that is retained in the Bearing and Seat Housing.

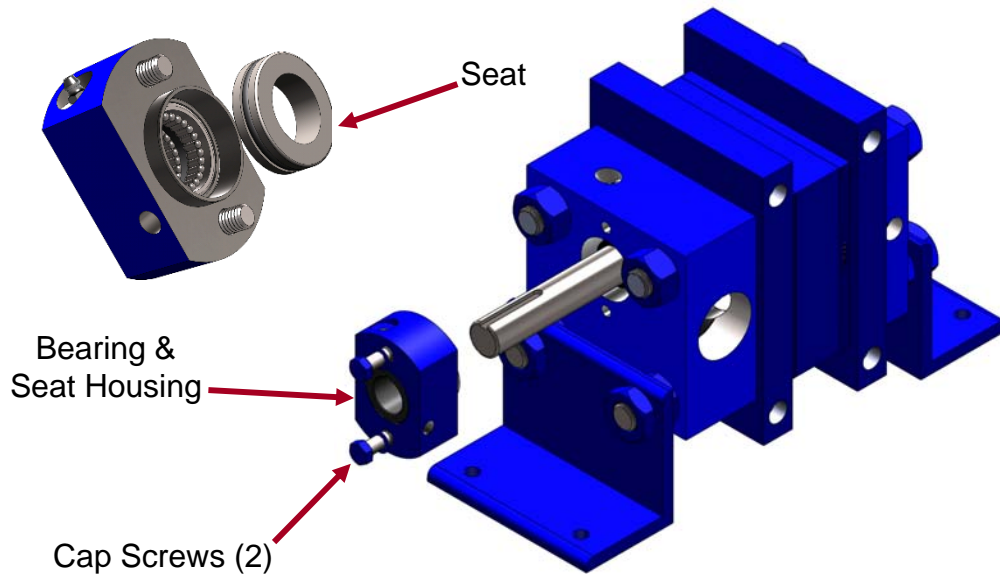

Step

2


Remove the Pipe Plug that is located on the top of the pump in the Seal Access Port. This Port will allow access to the Mechanical Seal Head.

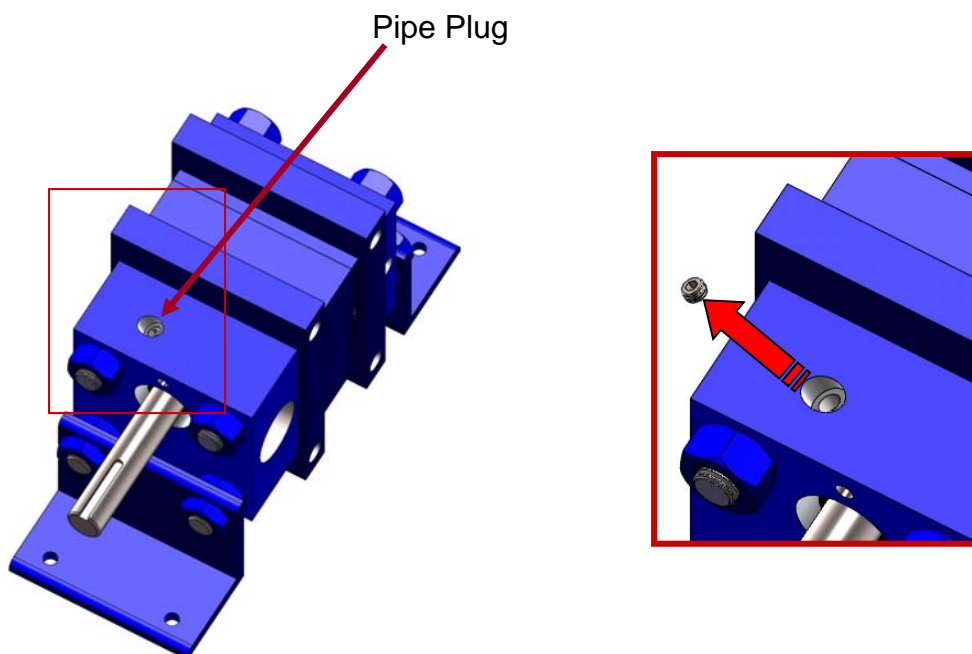

Step

3


Use an Allen wrench to loosen the set screws that retain the mechanical seal. Manually rotate the pump shaft so that the set screws are aligned and accessible through the Seal Access hole.

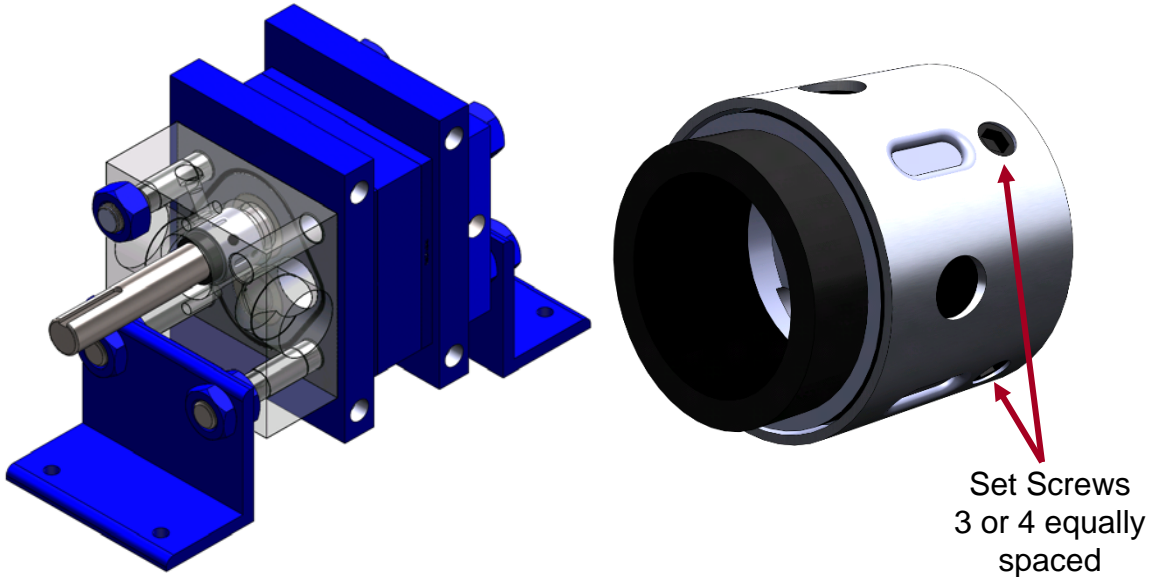

Step


4

Remove the Mechanical Seal Head by sliding it over and off the drive shaft. To reassemble the pump with the new Mechanical Seal Head, first lubricate drive shaft with a light film of oil. Repeat the disassembly instructions in reverse order. Be careful not to touch the polished surface on the Seat or Mechanical Seal Head. Any minute scratch, burr, or defect could permit the Mechanical Seal to leak.

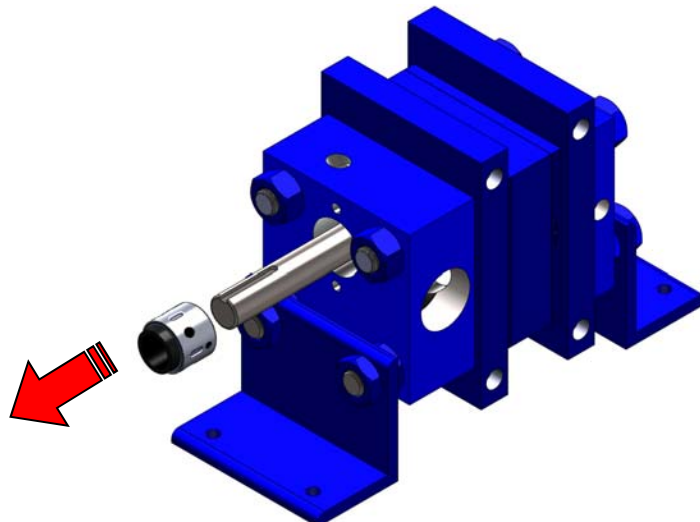

Replacement of Shaft Packing Seal

Packing Diagram

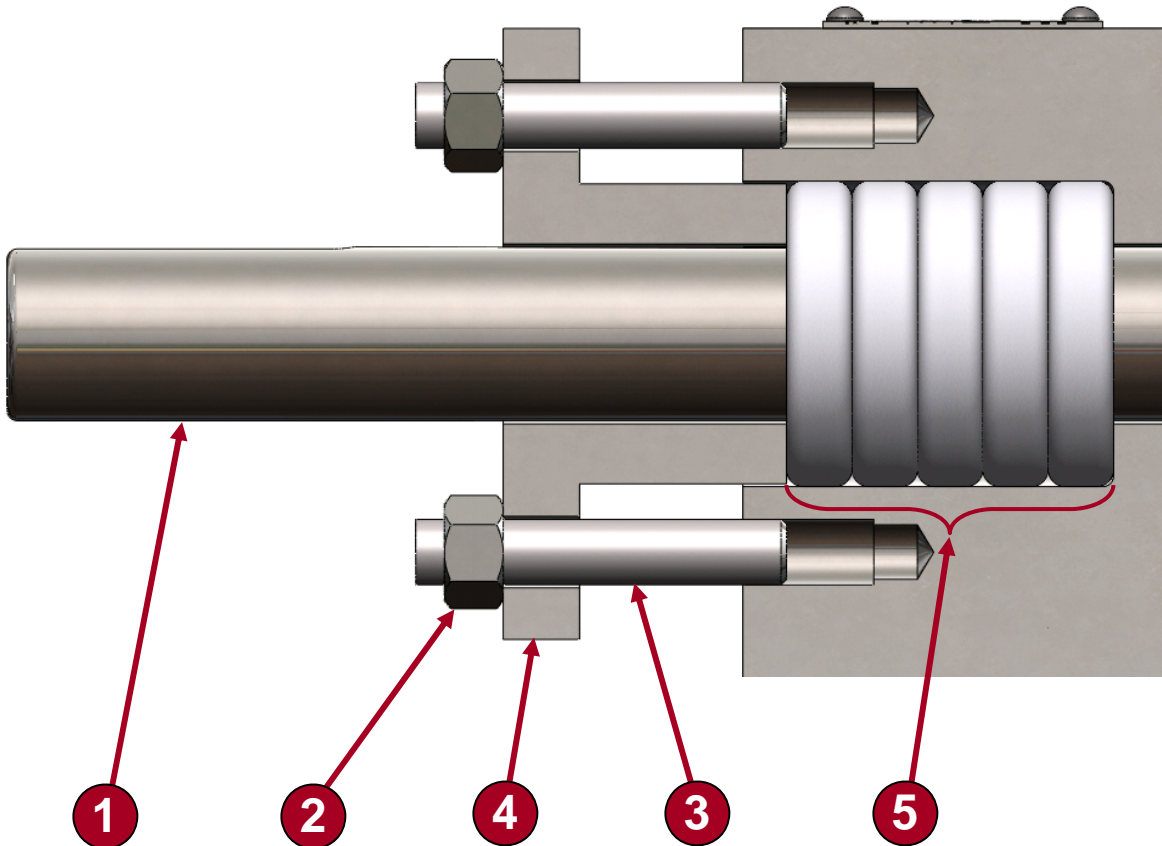


No.	Name
1	Drive Shaft
2	Elastic Stop Nut
3	Gland Stud
4	Packing Gland
5	Teflon Packing Set

Step

1


Loosen the two Elastic Locknuts that hold the Packing Gland. Remove the Elastic Locknuts and Packing Gland.

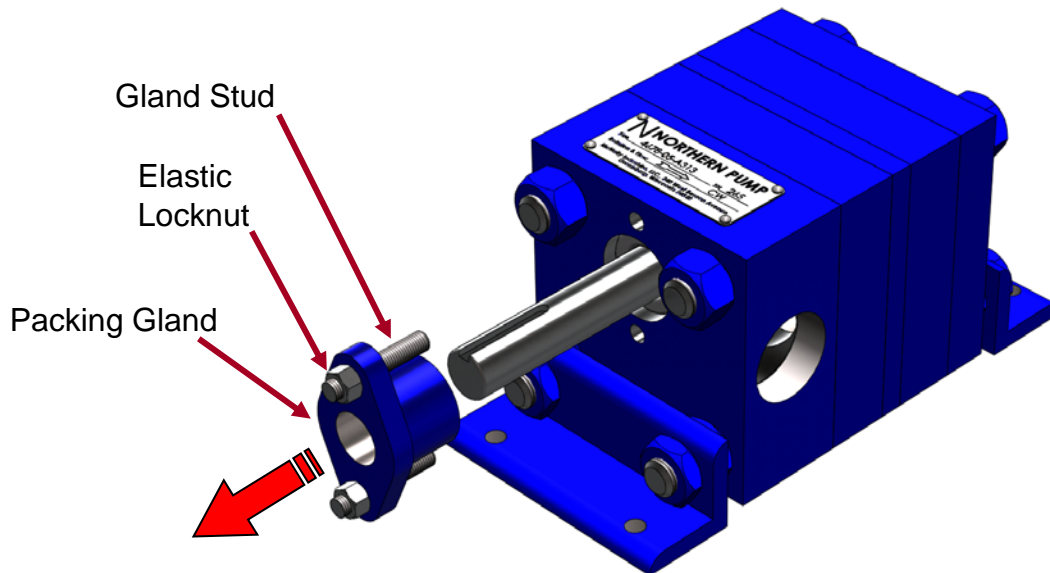

Step

2


Using a corkscrew or other, similar tool, remove the packing from the pump. Take care not to scratch or damage the bore of the Seal Adapter Plate. The type and number of rings in the packing set will vary between different pump models.

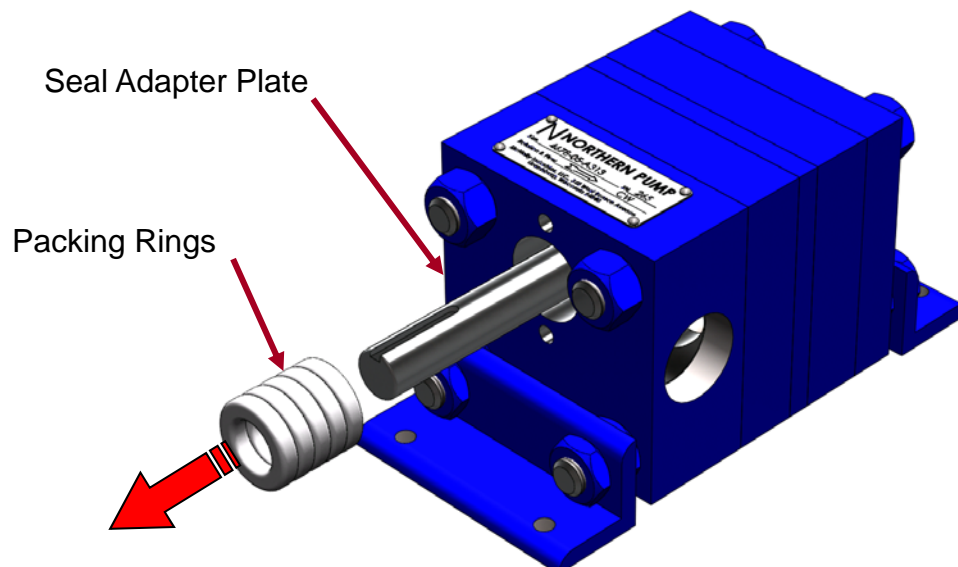

Step

3

Lubricate drive shaft with a light film of oil. Wrap each bias cut ring of new packing around the shaft, press into packing plate bore. Seat each ring individually and stagger ring splits every 120 degrees. Install packing gland, tighten Locknuts till the nylon in the locknuts is engaged. Put pump into service. If it leaks, tighten the locknuts equally until leaking ceases.

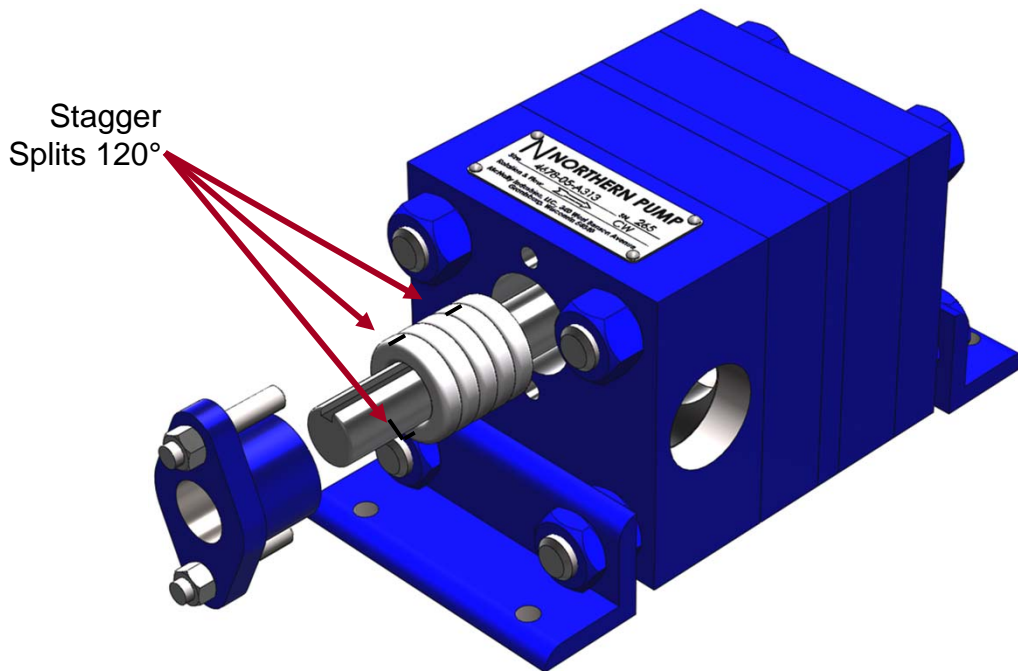

Northern Pump Contact Information

Please contact the Northern Pump Office with any questions relating to this bulletin.

To order replacement parts call our office or visit the following page:

<http://www.northern-pump.com/parts.htm>

To schedule a factory overhaul call our office or visit the following page:

http://www.northern-pump.com/pump_maintenance.htm

To order a replacement pump call our office or visit the following page:

http://www.northern-pump.com/replacement_pump_quote.htm

Northern® Pump

Division of McNally Industries LLC
340 W. Benson Rd.
Grantsburg, WI 54837

(800) 366-1410

(715) 463-5177 Fax

www.northern-pump.com